



CENTIPED[®] INSTRUCTIONS & GAME RULES

HOUSING LAYOUT

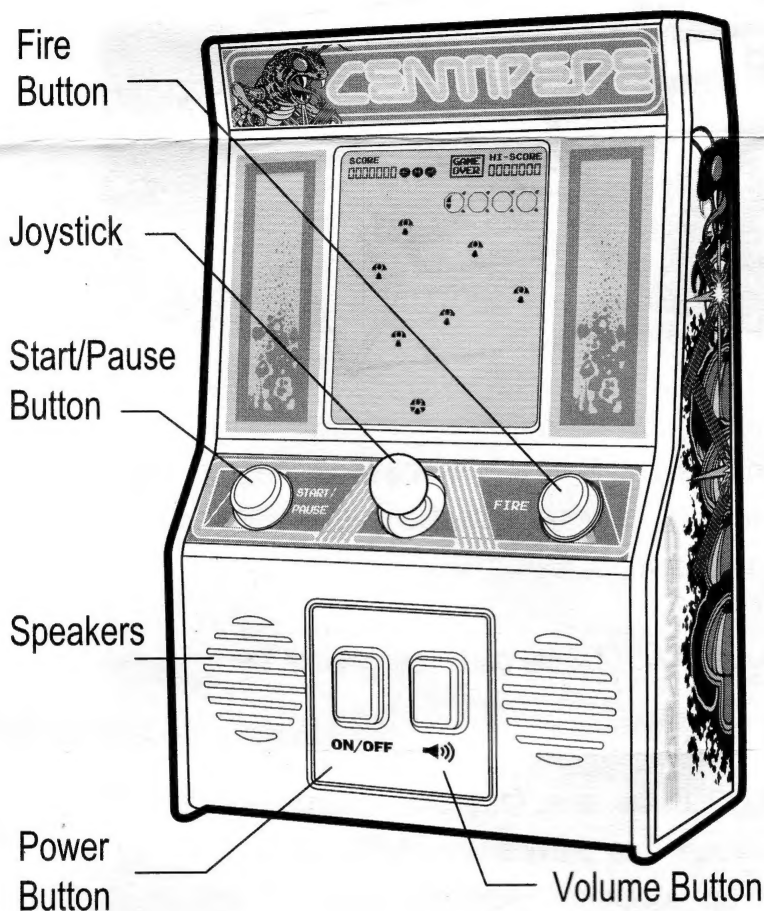

SCREEN LAYOUT

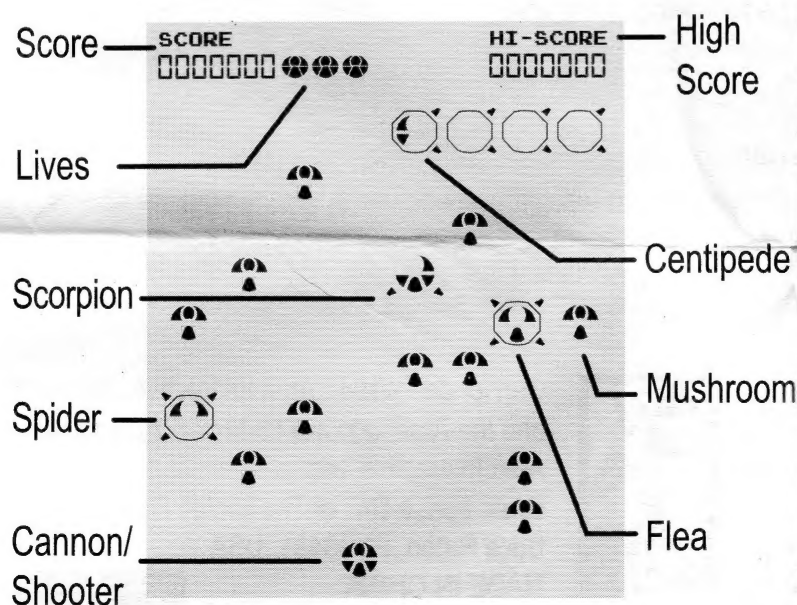

GAME SET-UP

The object of the game is to destroy the centipede before it makes its way toward you at the bottom. Destroy all centipede segments on each level to advance. Once you defeat all of the levels in the game you will be victorious!

GAME PLAY

Use the joystick to move your character around the bottom portion of the screen (you can move up and down in addition to moving sideways). Try to avoid direct contact with the backyard insects, and instead use the Fire button to shoot projectiles at them and destroy them.

When a centipede makes contact with a mushroom, it will drop down one row and change direction to avoid it. Mushrooms will be scattered throughout the levels, and strategically managing them can be your key to controlling and predicting the centipede's movement.

Be conscious of where you're destroying centipede segments – each time a part of a centipede is destroyed, a mushroom will appear at that spot. Mushrooms take a few hits to destroy, so be prepared when you're attacking the centipede.

Levels will become progressively more difficult as the game goes on, and the centipede segments will come more often and move faster than before.

SCORING

There are several ways to earn points in Centipede;

- Centipede segment destroyed – 10 points each

- Centipede head destroyed – 100 points each

- Flea destroyed – 200 points each

- Spider destroyed – 300/600/900 points each, depending on how close the spider is to the shooter

- Mushroom fully destroyed – 1 point each

- Extra lives are awarded every 10,000 points.

- After 60 seconds of inactivity, it will begin to shut down. To restart from sleep mode, press any button.


- To end the "Try me" mode, remove the "Try me" pull tab in the back of the unit.

BATTERY INFORMATION

- Non-rechargeable batteries are not to be charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Dispose of batteries safely.
- Do not dispose of batteries in fire. Batteries may explode or leak.

BATTERY INSTALLATION

Using a Phillips/crosshead screwdriver (not included), loosen the screws in the battery compartment cover (screws stay attached to cover.) Remove the cover. Insert 3 x 1.5V "AA" size batteries. Alkaline batteries recommended. Replace cover and tighten screws.

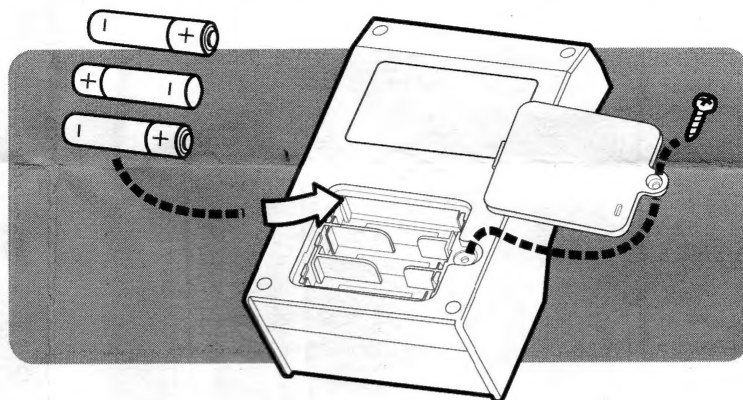

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Item#
09547



VISIT US AT
THEBRIDGEDIRECT.COM

Centipede® ©1981 Atari Interactive, Inc. Atari and the Atari logo are trademarks owned by Atari Interactive, Inc.

Basic Fun, a Div. of The Bridge Direct, Inc.
Boca Raton, FL 33431, USA

MADE IN CHINA

CAN ICES-3(B)/NMB-3(B)



The Wheelie bin symbol indicates that the product and the batteries must not be disposed of with other household waste as they may contain elements which can have a harmful effect on the environment and human health. Please use designated collection points of recycling facilities when disposing of the item and the batteries. To help locate your nearest facility see: www.recyclenow.com

WARNING! Not suitable for children under 3 due to small parts.

The colors and decorations of products enclosed may sometimes vary from the pictures on the packaging. Please retain this package for future reference.



www.atari.com